


# QUICK USER GUIDE – ST-5020/ SR-A Series

## 1. Installation


### [ST-5020 – Transmitter]

- 1) Plug the power adapter and insert the connector into the port next to the antenna.
- 2) Turn on the power switch on the right side of the transmitter.
- 3) Set Channel Number & Group Number to connect with the receiver.

#### ◆ Channel Number Setting [Pn] (Range: 1~15)

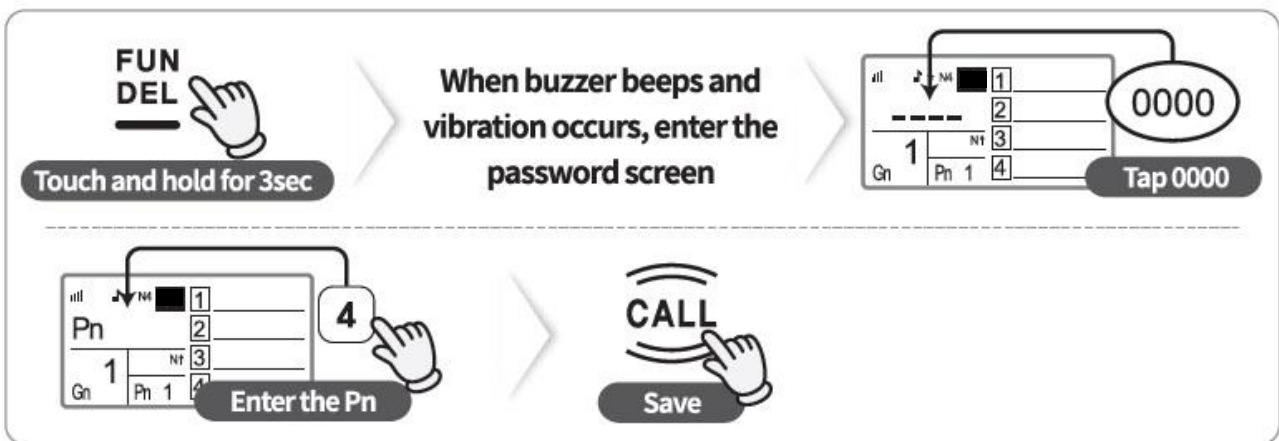

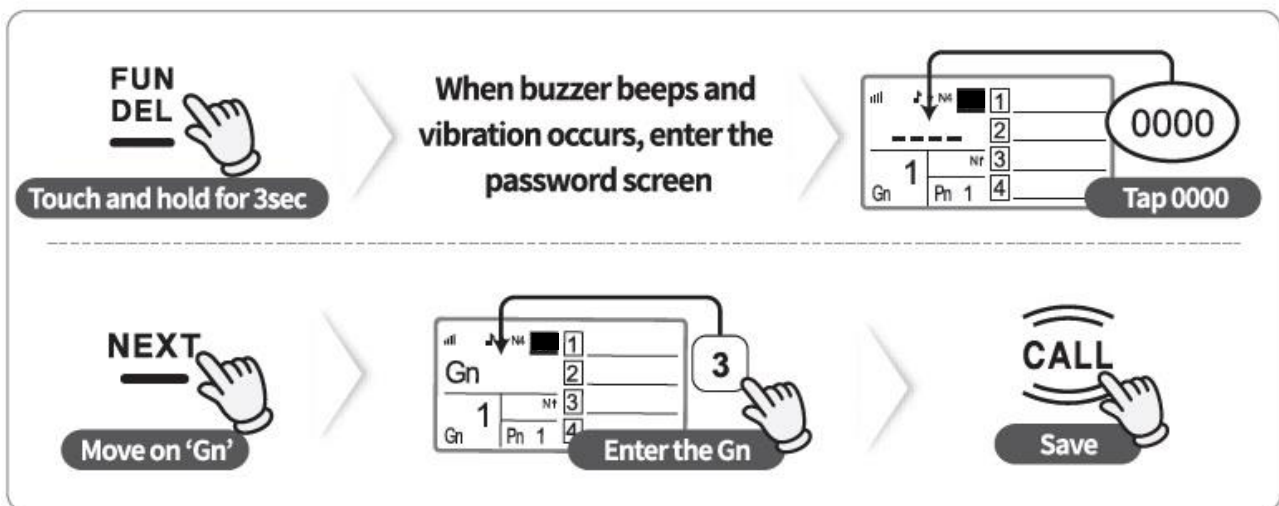

#### ◆ Group Number Setting [Gn] (Range: 1~99)





## [SR-A Series – Receiver]

- 1) Plug the power adapter and insert the connector into the jack on the back.
- 2) Turn on the power switch on the right side of the receiver.
- 3) **Set the same Channel Number & Group Number** to connect with the transmitter.


### ◆ Channel Number Setting [E5]

1. Press <b>FUN</b> for 5sec to enter the extension mode.	channel number setting 
2. Press <b>▲</b> 4 times and then press <b>ENT</b> .	
3. Set the channel number by ▼/◀▶/▲. * Range: 1~15 (Default: 1)	Set the channel number 
4. Press <b>ENT</b> to save.	

### ◆ Group Number Setting [E2]

1. Press <b>FUN</b> for 5sec to enter the extension mode.	Group number setting 
2. Press <b>▲</b> once and then press <b>ENT</b> .	
3. Set the group number by ▼/◀▶/▲. * Range: 1~99 (Default: 0)	Set the group number 
4. Press <b>ENT</b> to save.	

## 2. Keypad Description

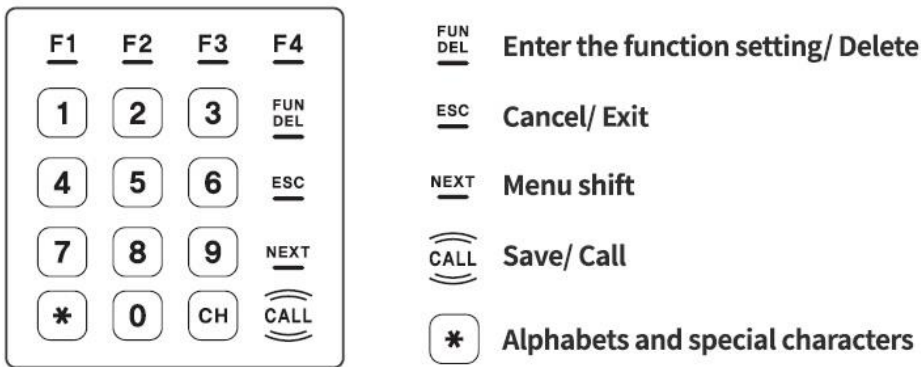


### Description of Functions

Functions		Default	Range
Channel Number Setting	Pn	1	1~15
Group Number Setting	Gn	1	1~99
The Number of Digits Displayed Setting	N1	5	2~5
RF Output Power Control	RP	2	1~2
Beep Sound Setting	SC	1(ON)	0-OFF, 1-ON
Haptic Feedback Setting	VC	1(ON)	0-OFF, 1-ON

## 3. Function Setting


### 3-1. The Number of Digits Displayed Setting [N1]

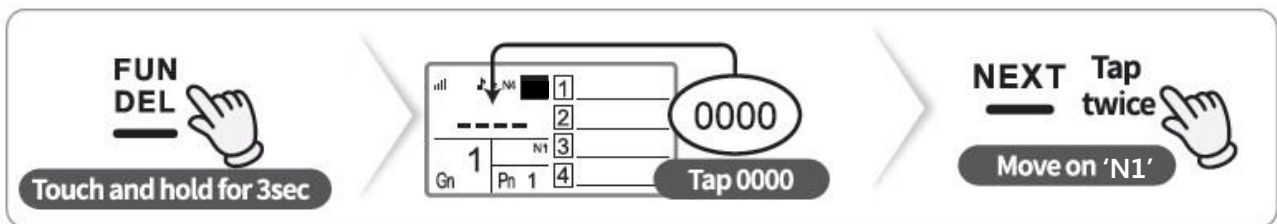

\* Set the number of digits displayed according to your receiver type.

ex) SR-A2003 → '2', SR-A330 → '3', SR-A440 → '4'

### 3-2. RF Output Power Control [RP]

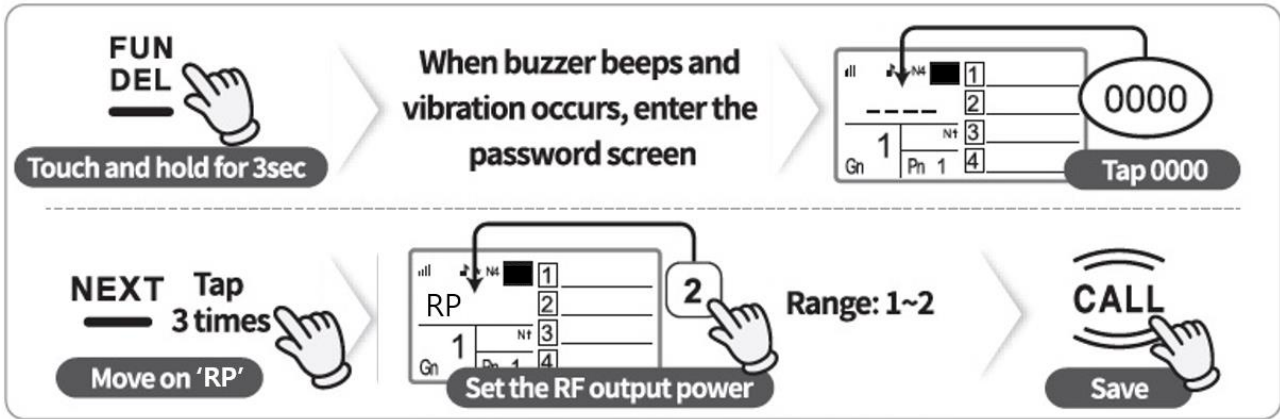

### 3-3. Beep [SC] & Haptic Feedback Setting [VC]

